

---

# **Muscle BioAmp Blip**

**Upside Down Labs**

**Apr 18, 2024**


# CONTENTS

1	Overview	2
2	Features & Specifications	3
3	Hardware	4
4	Connecting with Arduino	6
5	Some project ideas	7

A mikroBUS™ compatible ElectroMyography (EMG) sensor for precise recording of muscle signals.

## **OVERVIEW**

Muscle BioAmp Blip is single channel mikroBUS™ compatible ElectroMyography (EMG) sensor for precise muscle signal recording. It allows you to add the EMG functionality to your projects at ease. You can either connect it to any mikroBUS port or even a breadboard to get started.

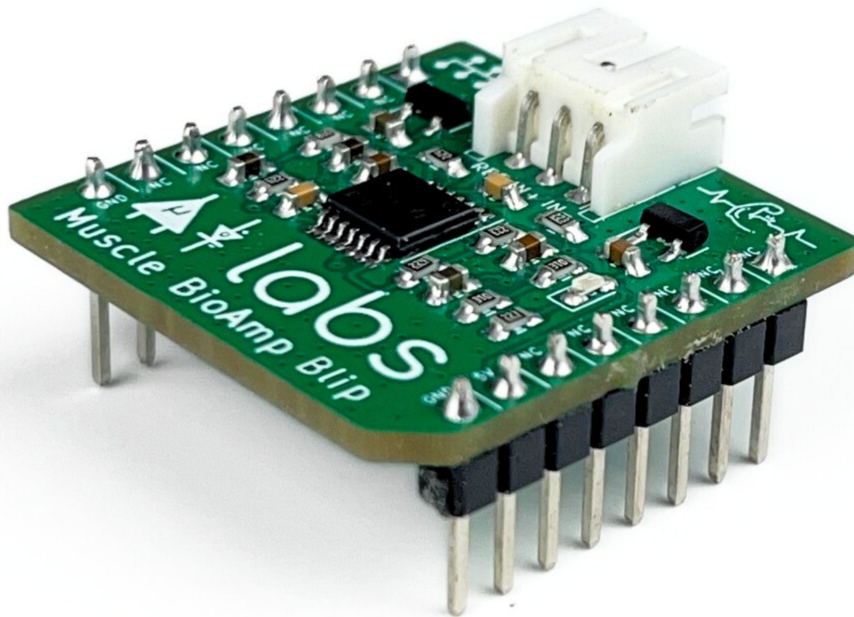

## FEATURES & SPECIFICATIONS

Minimum Input Voltage	5 V
Input Impedance	$10^{12}$ ohm
Fixed Gain	x2420
Bandpass filter	72 – 720 Hz
Compatible Hardware	Any development board with an ADC (Arduino UNO & Nano, Espressif ESP32, Adafruit QtPy, STM32 Blue Pill, BeagleBone Black, Raspberry Pi Pico, to name just a few)
BioPotentials	EMG (Electromyography)
No. of channels	1
Electrodes	3 (Positive, Negative, and Reference)
Dimensions	2.54 x 2.86 cm
Open Source	Hardware + Software

## HARDWARE


Images below shows a quick overview of the hardware design.

### PCB Front



### PCB Back




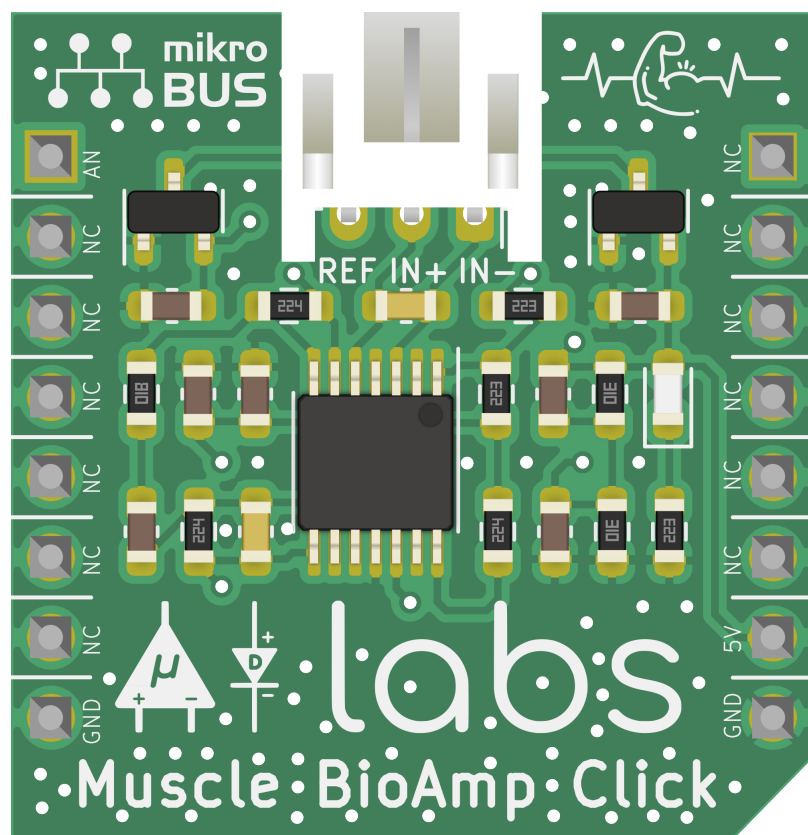

## CONNECTING WITH ARDUINO

To get started, you can pair Muscle BioAmp Blip with any development board with an ADC (Arduino UNO & Nano, Espressif ESP32, Adafruit QtPy, STM32 Blue Pill, BeagleBone Black, Raspberry Pi Pico, to name just a few) or any standalone ADC of your choice.

To measure the EMG signals, connect BioAmp Cable v3 with your muscle sensor as shown in the image below:

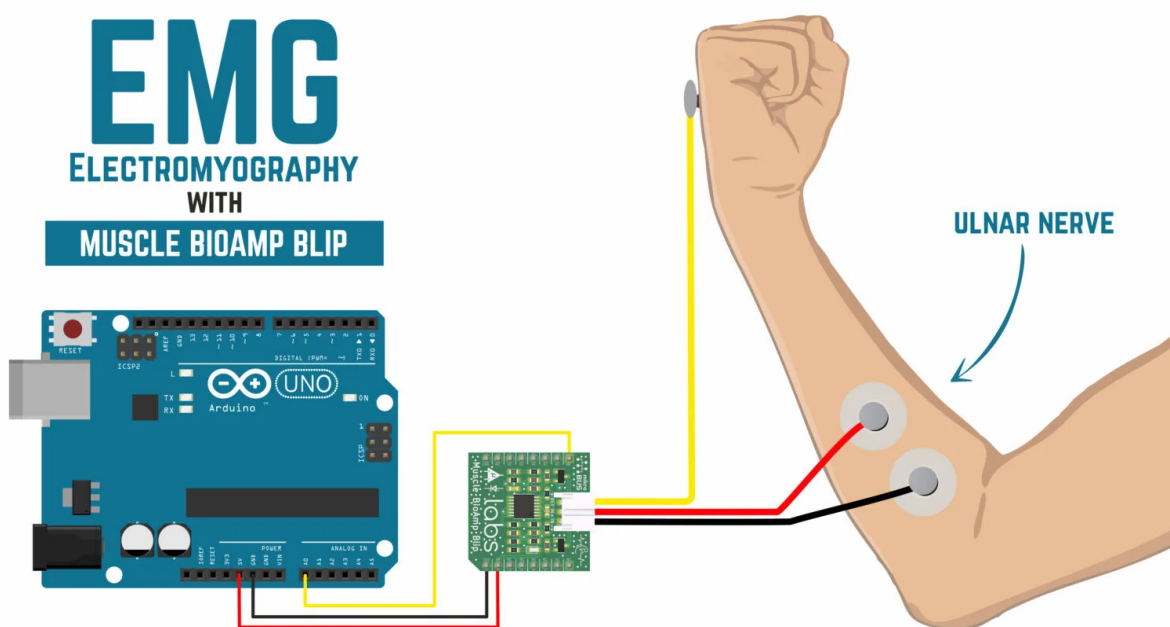



**SOME PROJECT IDEAS**